MERITOR® AFTERMARKET AIR VALVES



Streamline Your Ordering With Confidence.

With today's sophisticated commercial vehicles, compressed air requirements are increasing. Fleets and truck operators need air valves they can rely on to maintain peak performance. With a commitment to bringing high-quality solutions to the aftermarket, Meritor has been a master distributor of Sealco® valves for over 20 years. Sealco air valves combine OE quality and outstanding value, and all Sealco products are made right here in the U.S.A. Why purchase from multiple suppliers when you can consolidate to purchasing from one? Simplify your ordering process and add Sealco air valves to your next order.

Features and Benefits

 All Sealco products are designed, engineered, manufactured and assembled in the U.S.A.

Sealco valves are produced to the highest standards using primarily a zinc alloy that reduces porosity and results in stronger threaded ports

100% pneumatic and submersion testing is conducted on all air valves to ensure zero leakage

In-house die cast and machine shop facilities allow for complete control of the product at every stage of the manufacturing process

Save time and money with Sealco plug units that allow fleet customers to replace only a portion of a valve assembly instead of the entire unit

Find Your Replacement.

Sealco valves can be used as a direct replacement for existing competitive valves for truck, tractor, bus and trailer applications. Choose from one of the popular air valves below or from our stock of over 100 part numbers.

Top Moving Part Numbers								
Meritor Part Number	Description							
RSL110500	Spring Brake Control Valve							
RSL110700	Spring Brake Control Valve							
RSL110800	Spring Brake Control Valve							
RSL140280	Pressure Protection Valve							
RSL17600B	Emergency Release Valve							
RSL140270	Pressure Protection Valve							
RSL5400	Hand Control Valve							
RSL110170	Spring Brake Control Valve							
RSL110415	4-Port Relay Valve							
RSL110376	Emergency Control Valve							



You Deserve Complete Customer Support.

Get the attention you deserve with Meritor's extensive customer support services. For complete product information and specifying assistance, training and technical support, count on our expert field sales force, Meritor's industry-leading Customer Care team provides an all-purpose, one-call solution for customer satisfaction. For more information, call our U.S. Customer Care Center at 888-725-9355. In Canada, call 800-387-3889. Or visit MeritorPartsXpress.com.



Product models, brands, names and trademarks depicted herein are the property of their respective owners and, except where otherwise indicated, are not in any way associated with Meritor Heavy Vehicle Systems, LLC, or any parent or affiliate, thereof.



TRAILER AIR VALVES CHECK VALVES

SEALCO BY-PASS CHECK VALVE



MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	LENGTH	PORT SIZE	DIAMETER	ORIFICE SIZE	APPLICATION AND GENERAL INFORMATION
RSL110183	E-SL110183		Sealco 110183	2-3/8"	1/4"	1-1/4"	0.1	
RSL110183	E-SL220100	New	Sealco 220100				.21	
RSL110183	E-SL220000		Sealco 220000	3-3/8"	3/4"	1-1/2"		





MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	PORT SPEC	IFICATIONS	APPLICATION AND GENERAL
				A	В	INFORMATION
RSL22001/2	E-SL22001/2		Sealco 22001/2	1/2" PT	1/2" PT	
RSL22001/4	E-SL22001/4	New	Sealco 22001/4	1/4" PT	1/4" PT	Dimension Size 2-3/8" x 1-1/4"
RSL22003/4	E-SL22003/4		Sealco 22003/4	3/4" PT	3/4" PT	

SEALCO ONE-WAY CHECK VALVE



MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL10200-1/2	E-SL10200-1/2		Sealco 10200-1/2	
RSL10200-3/4	E-SL10200-3/4		Sealco 10200-3/4	
RSL10200-3/8	E-SL10200-3/8	New	Sealco 10200-3/8	
RSL102001	E-SL102001		Sealco 102001	
RSL102002	E-SL102002		Sealco 102002	

TRAILER AIR VALVES CHECK VALVES

SEALCO TWO-WAY CHECK VALVE




MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	REPAIR KIT NO.	APPLICATION AND GENERAL INFORMATION
RSL3200-1/4	E-SL3200-1/4		Sealco 3200-1/4		
RSL3200	E-SL3200		Sealco 3200	E-SL32-5	
RSL320100	E-SL320100	New	Sealco 320100		
RSL5200	E-SL5200		Sealco 5200	E-SL52-5	
RSL7200	E-SL7200		Sealco 7200	E-SL72-5	

SEALCO COMBINATION VALVE



MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL110128	E-SL110128		Sealco 110128	
RSL110130	E-SL110130	New	Sealco 110130	
RSL110131	E-SL110131		Sealco 110131	

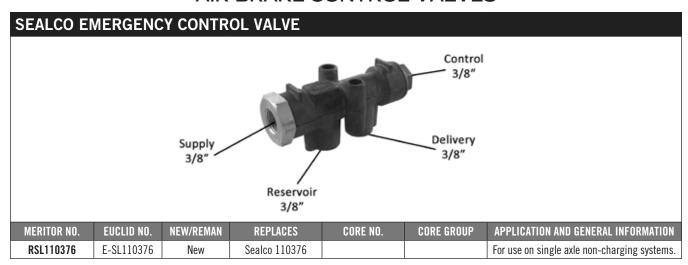



Push-Pull Valves — Manually operable — Pressure sensitive, on/off valves which will automatically return to the button out (exhaust) position when supply pressure is below the required minimum.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL110114	E-SL110114		Sealco 110114	
RSL110189	E-SL110189		Sealco 110189	
RSL110284	E-SL110284		Sealco 110284	
RSL110514	E-SL110514		Sealco 110514	
RSL110528	E-SL110528		Sealco 110528	Round black metal knob
RSL110644	E-SL110644		Sealco 110644	Contains screws but no name plate
RSL17600	E-SL17600		Sealco 17600	
RSL17600B-2	E-SL17600B-2		Sealco 17600B-2	Includes Emergency Brake Release dash cover plate and button. Basic valve part no. (without plate) — E-SL17600B-2
RSL17600B	E-SL17600B	New	Sealco 17600B	
RSL17600L	E-SL17600L		Sealco 17600L	7/8" -20 Thread Mount
RSL17600LB	E-SL17600LB	New	Sealco 17600LB	
RSL17600M	E-SL17600M		Sealco 17600M	Includes Emergency Brake Release dash cover plate and button. Basic valve part no. (without plate) — E-SL17600B-2
RSL340250	E-SL340250		Sealco 340250	Starter Control
RSL340350	E-SL340350		Sealco 340350	
RSL342501	E-SL342501		Sealco 342501	Starter control/emergency release and differential lockout valve. Cab Control Valve.
RSL3450	E-SL3450		Sealco 3450	
RSL3450G	E-SL3450G		Sealco 3450G	
RSL3450S	E-SL3450S		Sealco 3450S	
RSL99600	E-SL99600		Sealco 99600	Automatic Shut off. Push to park/pull to release.

SEALCO PUSH-PULL CONTROL VALVE



Push-Pull Valves — Manually operable — Pressure sensitive, on/off valves which will automatically return to the button out (exhaust) position when supply pressure is below the required minimum.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL99600B	E-SL99600B	Now	Sealco 99600B	Valve assembly with nameplate and knob
RSL99600BL	E-SL99600BL	New	Sealco 99600BL	Valve assembly with nameplate and knob with Lock-Out

SEALCO PUSH-PULL CONTROL VALVE



Push-Pull Valves — Manually operable — Pressure sensitive, on/off valves which will automatically return to the button out (exhaust) position when supply pressure is below the required minimum.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
RSLA25600-2	E-SLA25600-2		Sealco A25600-2	Without knob
RSLA25600	E-SLA25600	New	Sealco A25600	Pull to park / push to release.
RSLA25600Y	E-SLA25600Y		Sealco A25600Y	With knob


SEALCO LEVER CONTROL VALVE



MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION					
RSL110103	E-SL110103		Sealco 110103						
RSL110167	E-SL110167		Sealco 110167						
RSL110300	E-SL110300		Sealco 110300	Includes Tailgate — Open — Close dash cover plate.					
RSL110301	E-SL110301		Sealco 110301						
RSL110413	E-SL110413	New	Sealco 110413	Uses name plate # 8116					
RSL21600-2	E-SL21600-2		Sealco 21600-2	No plate included.					
RSL21600	E-SL21600		Sealco 21600	Includes Truck Tractor Protection dash cover plate.					
RSL216050	E-SL216050		Sealco 216050	Includes On-Off dash cover plate.					
RSL216200	E-SL216200		Sealco 216200						



TRAILER AIR VALVES AIR BRAKE FOOT VALVES

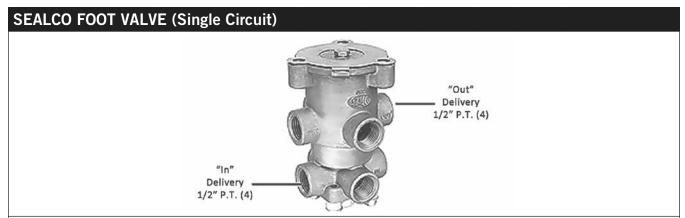

Single Circuit Foot Valve — Normally used on pre FMVSS-121 vehicles. It is foot operated and controls the delivery of air to the brake chambers. Simply stated it provides the drive with a means of applying and releasing the brakes on a vehicle.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	DELIVERY PORTS	TREADLE ASSEMBLY	TREADLE Angle	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL6125-2	E-SL6125-2		Sealco 6125-2X		None		XC1200	SL100	
RSL6125-35	E-SL6125-35		Sealco 6125-35	1/2" PT (4)					
RSL6125-45	E-SL6125-45	New	Sealco 6125-45		Yes	45°			Furnished less treadle and mounting brackets.
RSL6125-7	E-SL6125-7		Sealco 6125-7		res	30°			and mounting brackets.
RSL6125	E-SL6125		Sealco 6125	1/2" PT (4)		30	XC1200	SL100	

SEALCO FOOT VALVE (Dual Circuit)



Dual Circuit Foot Valves — A dual foot has two separate circuits for service and secondary braking, and is used in dual circuit air brake systems mandated by FMVSS-121. Braking ability is maintained in the event that one circuit fails.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	REPAIR KIT	CORE No.	CORE Group	APPLICATION AND GENERAL INFORMATION
RSL110405	E-SL110405	New	Sealco 110405	E-SL110297	XC1200	SL100	Furnished less treadle and mounting brackets.


TRAILER AIR VALVES AIR BRAKE HAND CONTROL VALVES



Hand Control Valves — The most common function of hand control valves is for independent control of trailer service brakes. As a result they are also referred to as "Trailer Control Valves."

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	MOUNTING KIT	APPLICATION AND GENERAL INFORMATION		
RSL5900	E-SL5900		Sealco 5900	E-SL110174, E-SL110176			
RSL5900B	E-SL5900B		Sealco 5900B	E-SL110176			
RSL5900G	E-SL5900G	New	Sealco 5900G		Furnished less handle and clamp.		
RSL5900GI	E-SL5900GI		Sealco 5900GI	E-SL110174			
RSL5900L	E-SL5900L		Sealco 5900L				

TRAILER AIR VALVES AIR BRAKE PROTECTION VALVES

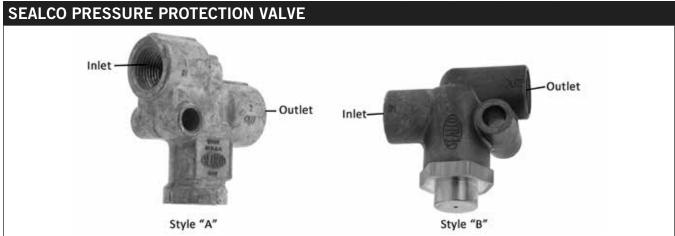

					SF				
MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	STYLE	INLET	OUTLET	OPEN	CLOSE	QUICK FIX REPAIR KIT
RSL140370	E-SL140370		Sealco 140370		1/4"	1 / 4	70 psi	60 psi	E-SL140271
RSL140380	E-SL140380		Sealco 140380	Λ.	1/4	1/4"	80 psi	70 psi	E-SL140281
RSL140200	E-SL140200		Sealco 140200	A			70 noi	60 psi	E-SL140201
RSL140270	E-SL140270		Sealco 140270	В	3/8"	3/8"	70 psi		E-SL140271
RSL110257	E-SL110257	New	Sealco 110257		3/6	3/6	75 psi	70:	
RSL110258	E-SL110258		Sealco 110258	l B					
RSL140390	E-SL140390		Sealco 140390		1/4"	1/4"	90 noi	70 psi	
RSL140280	E-SL140280		Sealco 140280	A	3/8"	2/0"	80 psi		E-SL140281
RSL140290	E-SL140290		Sealco 140290		3/8	3/8"	90 psi	80 psi	

SEALCO PRESSURE CONTROL VALVE



Pressure Reducing Valve — Used where a constant set air pressure lower than supply pressure is required. Typically an air operated application that requires less than system air pressure.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	NOMINAL DELIVERY PRESSURE	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL9400	E-SL9400	New	Sealco 9400	5-6 psi 85 psi maximum			

TRAILER AIR VALVES AIR BRAKE QUICK RELEASE VALVES

SEALCO QUICK RELEASE VALVES




				CRACK		PORT S	SIZE PT		
MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	PRESSURE	A	В	C	EXHAUST	QUICK FIX REPAIR KIT
RSL200000	E-SL200000		Sealco 200000		1/4"				E-SL200125
RSL200004	E-SL200004		Sealco 200004	0-1 psi	1/4			1/2"	
RSL2000D3/8	E-SL2000D3/8		Sealco 2000D3/8	0 1 po.					E-SL20D-5
RSL2000B3/8	E-SL2000B3/8		Sealco 2000B3/8	4-5 psi		1/4"	1/4"		E-SL20-5
RSL2000C3/8	E-SL2000C3/8		Sealco 2000C3/8	8-10 psi	3/8"				E-3L20-3
RSL200003	E-SL200003	New	Sealco 200003					1/2"	
RSL200001	E-SL200001		Sealco 200001	0-1 psi		3/8"	3/8"	1/2	E-SL20D-5
RSL2000D1/2	E-SL2000D1/2		Sealco 2000D1/2	0 1 po.					2 02200 0
RSL2000B1/2	E-SL2000B1/2		Sealco 2000B1/2	4-5 psi	1/2"				E-SL20-5
RSL2000C1/2	E-SL2000C1/2		Sealco 2000C1/2	8-10 psi					E-SL20D-5
RSL200002	E-SL200002		Sealco 200002	0-1 psi				1/2"	

SEALCO CONTROL VALVE




Ì	MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	APPLICATION AND GENERAL INFORMATION
	RSL3800	E-SL3800		Sealco 3800	
	RSL7800	E-SL7800	New	Sealco 7800	
	RSL780210	E-SL780210		Sealco 780210	

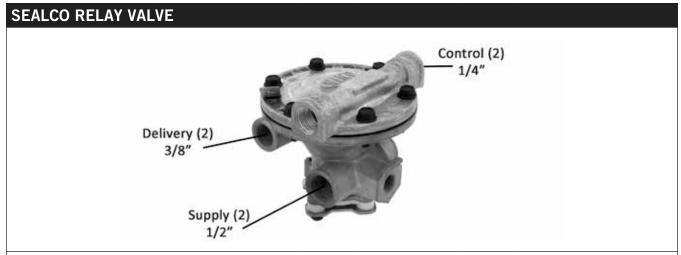

Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CONTROL Ports	CORE NO.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL110207	E-SL110207	New	Sealco 110207					
RSL9125	E-SL9125	New	Sealco 9125	5.5 psi	1/4" (3)			Includes mounting bracket ESL110237

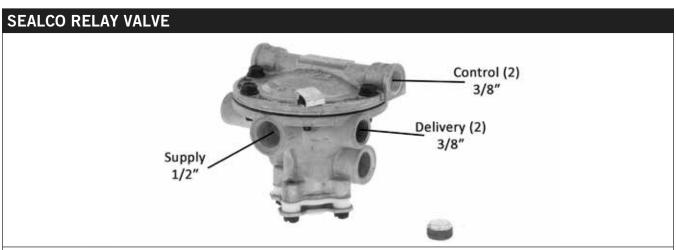

Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

				CRACK	CORE	CORE	APPLICATION AND
MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	PRESSURE	NO.	GROUP	GENERAL INFORMATION
RSL110197	E-SL110197X	Reman	Sealco 110197X	4.0 psi	XC1200	SL100	
RSL110198	E-SL110198	New	Sealco 110198				For trailer applications only.
RSL110199	E-SL110199X		Sealco 110199X	4.0 psi			
RSL110275	E-SL110275X	Reman	Sealco 110275X	4.0 µSi	XC1200	SL100	
RSL110507	E-SL110507X		Sealco 110507X	6.0 psi			

SEALCO MINI VALVE



Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	DELIVERY Ports	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL110207	E-SL3100	New	Sealco 3100	2.5 psi	1/4" (2)			Early version Control Line Valve. Commonly used on dollies. Can be replaced by E-SL110570 or E-SL110580.

SEALCO RELAY VALVE WITH RATIO Supply 3/4" Delivery (4) 3/8" Auxillary Supply 3/8"

Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	DELIVERY Ports	CORE No.	CORE Group	APPLICATION AND GENERAL INFORMATION
RSL110139	E-SL110139		Sealco 110139	4.5 psi		XC1200	SL100	Valve has ratio feature which is used during panic stop applications. Nipple mount design style — use E-SL6003 or E-SL6006. For trailer applications only.
RSL110450	E-SL110450	New	Sealco 110450		3/8" (4)			No ratio feature, Valve has ratio feature which is used during panic stop applications. Nipple mount design style— use E-SL6003 or E-SL6006. For trailer applications only.
RSL110584	E-SL110584		Sealco 110584	5.5 psi		XC1200	SL100	Valve has ratio feature which is used during panic stop applications. Nipple mount design style — use E-SL6003 or E-SL6006. For trailer applications only.


SEALCO LOV-2 SERVICE RELAY VALVE (2 Port Delivery)



Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CORE No.	CORE Group	APPLICATION AND General information
RSL110360	E-SL110360	- New	Sealco 110360	1.5 psi			Nipple mount design. Nipple not included. Use E-SL6002 or E-SL6003. LOV-2 = Low opening valve for single axle applications.
RSL110365	E-SL110365		Sealco 110365				Frame mount design. Includes mounting bracket. LOV-2 = Low opening valve for single axle applications.
RSL110410	E-SL110410		Sealco 110410	40			Nipple mount design. Nipple not included, use E-SL6002 or E-SL6003.
RSL110412	E-SL110412		Sealco 110412	4.0 psi			Frame mount design. Supplied with bracket Kit E-SL110395

SEALCO LOV-4 RELAY VALVE (4 Port Delivery)

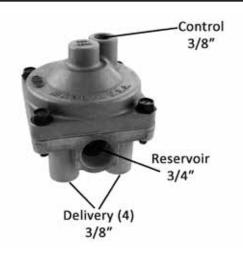


Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL110380	E-SL110380		Sealco 110380	1.5 psi			(1 swivel) 3/8" PT control port. (1) 3/4" PT supply port. (4) 3/8" PT delivery ports. LOV-4 = Low opening valve for tandem axle applications. Nipple mount design. Nipple not included, use E-SL6003 or E-SL6006.
RSL110385	E-SL110385	New	Sealco 110385	1.5 μοι			(1 swivel) 3/8" PT control port. (1) 3/4" PT supply port. (4) 3/8" PT delivery ports. LOV-4 = Low opening valve for tandem axle applications.
RSL110415	E-SL110415	IACM	Sealco 110415	4.0 psi			Nipple mount design. Nipple not included, use E-SL6003 or E-SL6006, E-SL110395 frame bracket included.
RSL110416	E-SL110416		Sealco 110416	4.0 psi			(1 swivel) 3/8" PT control port. (1) 3/4" PT supply port. (4) 3/8" PT delivery ports. LOV-4 = Low opening valve for tandem axle applications. Nipple mount design. Nipple not included, use E-SL6003 or E-SL6006.


TRAILER AIR VALVES AIR BRAKE CONTROL LINE VALVES

SEALCO CONTROL LINE VALVE

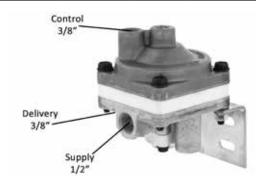

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CORE No.	CORE GROUP	APPLICATION AND General information
RSL110580	E-SL110580		Sealco 110580			Includes mounting bracket
RSL110588	E-SL110588	Now	Sealco 110588			E-SL110580 valve with bracket 90° down
RSL110605	E-SL110605	New	Sealco 110605			E-SL110580 valve with E-SL10200-1/2 check valve
RSL110790	E-SL110790		Sealco 110790			Without bracket, can be nipple mount


SEALCO LOV-CF CONTROL LINE VALVE DOLLY USE ONLY

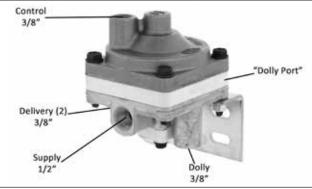

Relay Valve — Used to rapidly apply and release rear axle(s), service, or parking brakes. When signaled by the service brake valve, they graduate, hold or release air pressure from the chambers to which they are connected. The relay valve is used to balance the time of air application on the vehicle. This is determined by the factory preset "crack pressure" of the valve. Crack pressure is set on a relay valve by a "hold-off" spring that retard valve operation until a predetermined amount of air pressure is exerted.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CORE No.	CORE GROUP	APPLICATION AND General information
RSL110570	E-SL110370X		Sealco 110370X	4.5 psi			(1) 1/2" PT reservoir port. LOV-CF = Low opening valve. Designed to speed up the control line signal to rear trailers.
RSL110690	E-SL110375X	Reman	Sealco 110375X	1.5 psi	XC1200	SL100	(1) 1/2" PT reservoir port. LOV-CF = Low opening valve. Designed to speed up the control line signal to rear trailers. Frame mount.
RSL110570	E-SL110570		Sealco 110570				(1) 1/2" PT reservoir port. LOV-CF = Low opening valve. Designed to speed up the control line signal to rear trailers. Includes mounting bracket.
RSL110571	E-SL110571		Sealco 110571	0.0 pgi			
RSL110606	E-SL110606	New	Sealco 110606	0.0 psi			
RSL110690	E-SL110690		Sealco 110690				(1) 1/2" PT reservoir port. LOV-CF = Low opening valve. Designed to speed up the control line signal to rear trailers.

SEALCO RELAY EMERGENCY VALVE

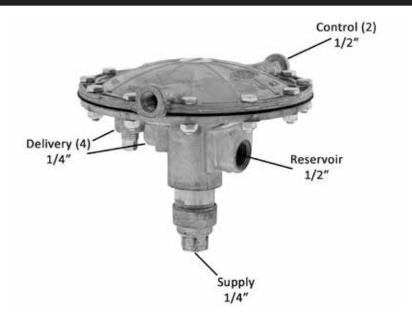

Relay Emergency Valve — A dual function valve used on trailers.

- (1) A relay valve that applies and releases the service brakes
- (2) An emergency feature that automatically applies the service brakes in the event that supply air is lost. Normally used on pre FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CORE No.	CORE Group	APPLICATION AND General information
RSLA1000S	E-SLA1000S	New	Sealco A1000S	1.5 psi	XC1200	SL100	Nipple mount design. Nipple not included. Use E-SL6002 or E-SL6003. For quick fix service use E-SL1000-5A cartridge.

SEALCO VALVE CARTRIDGE




Relay Emergency Valve — A dual function valve used on trailers.

- (1) A relay valve that applies and releases the service brakes
- (2) An emergency feature that automatically applies the service brakes in the event that supply air is lost. Normally used on pre FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	CORE No.	CORE GROUP	APPLICATION AND General information
RSL1000-5A	E-SL1000-5A	New	Sealco 1000-5A	1.5 psi			For use with the E-SLA1000X or E-SLA1000S Relay Emergency Valve.

SEALCO RELAY EMERGENCY VALVE (Charging Type)

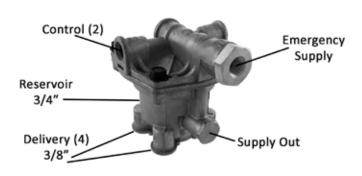


Relay Emergency Valve — A dual function valve used on trailers.

- (1) A relay valve that applies and releases the service brakes
- (2) An emergency feature that automatically applies the service brakes in the event that supply air is lost. Normally used on pre FMVSS-121 systems.

				CRACK		SPECIFICA	ATIONS			APPLICATION	
MERITOR NO.	EUCLID NO.	NEW/ Reman	REPLACES	PRESSURE	EMERGENCY SUPPLY	CONTROL PORTS	SUPPLY OUT	RATIO Feature	CORE No.	CORE GROUP	AND GENERAL INFORMATION
RSL110200	E-SL110200		Sealco 110200		1/4"	1/4" (2)	3/4"	Yes			Valve has ratio
RSL110475	E-SL110475		Sealco 110475				3/8"				is used during panic stop
RSL110460	E-SL110460	New	Sealco 110460	4.5 psi	3/8"	3/8" (2)		No			applications. Nipple mount design style —
RSL110470	E-SL110470		Sealco 110470			3/0 (2)	3/4"				
RSL110205	E-SL110205		Sealco 110205					Yes			use E-SL6003 or E-SL6006.

SEALCO DOLLY RELAY EMERGENCY VALVE

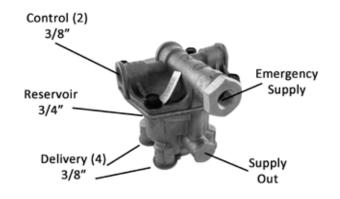


Relay Emergency Valve — A dual function valve used on trailers.

- (1) A relay valve that applies and releases the service brakes
- (2) An emergency feature that automatically applies the service brakes in the event that supply air is lost. Normally used on pre FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CRACK Pressure	DELIVERY Ports	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL110338	E-SL110338	Now	Sealco 110338	4.5 psi	//\ 2/0" DT			Typically used on converter dollies.
RSL110470	E-SL110268	New	Sealco 110268	5.5 psi	(4) 3/8" PT			E-SL110268 supply outlet plugged.

TRAILER AIR VALVES AIR BRAKE SPRING BREAK VALVES

SEALCO SPRING BRAKE CONTROL VALVE (Protected Reservoir System)

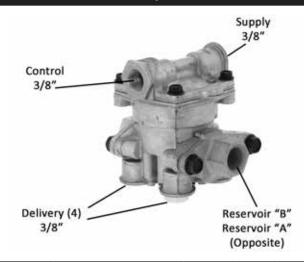

Spring Brake Valve — A dual function valve.


- (1) Limits hold-off pressure to the spring brakes via a relay of quick release valve, generally 90-95 psi.
- (2) Should a loss of pressure occur it provides a modulated spring brake application proportional to the service braking pressure delivered to the front axle. Commonly used on post FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	RESERVOIR "A"	RESERVOIR "B"	CORE No.	CORE Group	APPLICATION AND GENERAL INFORMATION
RSL110171 See Note 60	E-SL110171	Name	Sealco 110171	1/2"	3/8"			
RSL110170 See Note 60	E-SL110170	New	Sealco 110170		1/2"	XC1200	SL100	

Note: 60 Control/Supply ports on head rotate 90° from reservoir ports on body.

TRAILER AIR VALVES AIR BRAKE SPRING BREAK VALVES

SEALCO SPRING BRAKE CONTROL VALVE (Spring Brake Priority System)

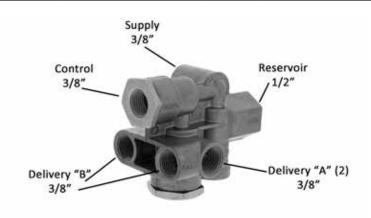


Spring Brake Valve — A dual function valve.

- (1) Limits hold-off pressure to the spring brakes via a relay of quick release valve, generally 90-95 psi.
- (2) Should a loss of pressure occur it provides a modulated spring brake application proportional to the service braking pressure delivered to the front axle. Commonly used on post FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CORE No.	CORE GROUP	APPLICATION AND GENERAL INFORMATION
RSL110500	E-SL110500	New	Sealco 110500	XC1200	SL100	For use on a typical single or tandem axle trailer with a single reservoir or a tandem axle trailer with (2) 1400 cubic inch (normal) reservoirs.

SEALCO SPRING BRAKE CONTROL VALVE (Service Reservoir Priority System)

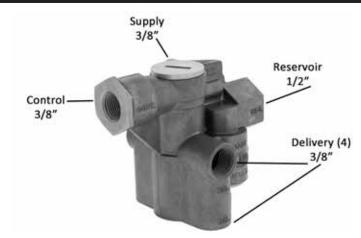

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CORE No.	CORE Group	APPLICATION AND GENERAL INFORMATION
RSL110700	E-SL110700	New	Sealco 110700	XC1200	SL100	For use on a typical single or tandem axle trailer with a single reservoir or a tandem axle trailer with (2) 1400 cubic inch (normal) reservoirs.

TRAILER AIR VALVES AIR BRAKE SPRING BREAK VALVES

SEALCO SPRING BRAKE CONTROL VALVE (Spring Brake Priority System)





Spring Brake Valve — A dual function valve.

- (1) Limits hold-off pressure to the spring brakes via a relay of quick release valve, generally 90-95 psi.
- (2) Should a loss of pressure occur it provides a modulated spring brake application proportional to the service braking pressure delivered to the front axle. Commonly used on post FMVSS-121 systems.

MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	CORE No.	CORE Group	APPLICATION AND GENERAL INFORMATION
RSL110800	E-SL110800	New	Sealco 110800			For use on a typical single or tandem axle trailer with a single reservoir or a tandem axle trailer with (2) 1400 cubic inch (normal) reservoirs.

TRAILER AIR VALVES AIR BRAKE SWITCHES AND INDICATORS

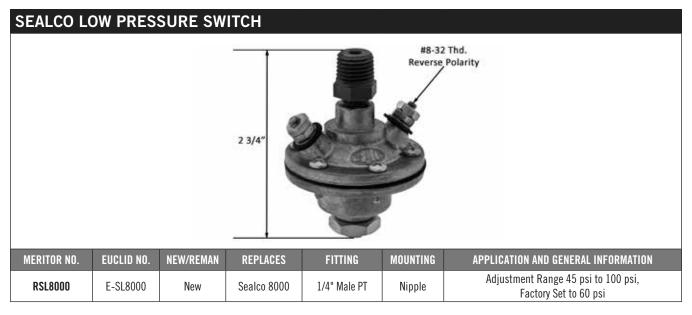

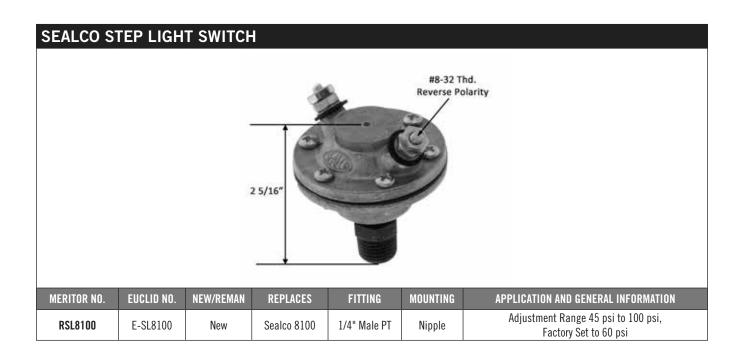

TRAILER AIR VALVES AIR BRAKE TRACTOR PROTECTION VALVES



AIR BRAKE MISCELLANEOUS VALVES





TRAILER AIR VALVES AIR BRAKE MISCELLANEOUS VALVES


SEALCO AIR STARTER VALVE




MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	INLET	OUTLET	MOUNT Holes	O-RING Material	APPLICATION AND GENERAL INFORMATION
RSL110390	E-SL110390		Sealco 110390	1-1/4" PT	1-1/4" PT	No	Viton	
RSL110486	E-SL110486		Sealco 110486	1-1/2" PT	1-1/2" PT	Vac	VILUII	
RSL14900	E-SL14900	New	Sealco 14900	1-1/4" PT	1-1/4" PT	Yes		
RSL110250	E-SL110250		Sealco 110250	1 1/0# DT	1 1/0# DT	No	Nitrile	Auxiliary Port (NPT) 1/4"
RSL10900	E-SL10900		Sealco 10900	1-1/2" PT	1-1/2" PT	No		Auxiliary Port (NPT) Closed


TRAILER AIR VALVES MOUNTING HARDWARE

FLANGE MOUNT KITS

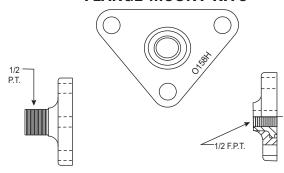

FRAME MOUNT KITS

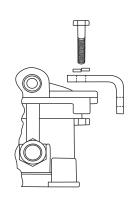

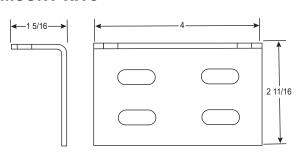





 
















TRAILER AIR VALVES AIR BRAKE SAFETY VALVES AND FITTINGS

SEALCO AIR TANK SAFETY VALVE



				SPECIFICATIONS		
MERITOR NO.	EUCLID NO.	NEW/REMAN	REPLACES	"POP OFF" Pressure	THREAD	APPLICATION AND GENERAL INFORMATION
RSL110127	E-SL110127	New	Sealco 110127	150 psi Factory Set	1/4" PT	

SEALCO MOUNTING NIPPLE



MERITOR NO.	EUCLID NO.	NPT SIZE	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL6002	E-SL6002	1/2" Male x 1/2" Male	Sealco 6002	
RSL6003	E-SL6003		Sealco 6003	
RSL616	E-SL616	3/4" Male x 1/2" Male	Sealco 616	Hex area between ends.
RSL617	E-SL617		Sealco 617	Female and Hex outside.
RSL6006	E-SL6006	3/4" Male x 3/4" Male	Sealco 6006	

SEALCO FRAME MOUNT TEE



MERITOR NO.	EUCLID NO.	PORT SIZE	REPLACES	APPLICATION AND GENERAL INFORMATION
RSL780212	E-SL780212	3/8"	Sealco 780212	With 12 volt heater